

Maintenance Poster

- MH 4M

ATTENTION!

Do not use the machine before you have read and understood the Instructions for use manual

Rinse the water inlet filter



1. Remove the water inlet filter.



2. Remove the filter housing and filter.



3. Rinse filter with compressed air or water.



4. Reinstall the filter housing and filter.

Maintenance of fuel filter



1. Remove the lid from the fuel tank.



2. Pull up the fuel filter from the fuel tank.



3. Rinse the fuel filter with compressed air.



4. Reinstall the fuel filter and close the lid.

Oil check & refill



1. Open service door by turning quarter turns.



2. The oil level must be above min. level mark.



3. Refill oil if needed.

Grease quick couplings/ nipples for hose, gun and lance



1. Grease the nipple on the lance.



2. Grease the quick coupling of the spray handle.



3. Grease the water outlet nipple.



4. Grease the quick coupling on the high pressure hose.